

VIVE
COMFORT
Operation Manual

VIVE
COMFORT
Operation Manual



TP-S-701i

Vive Comfort

P.O. Box 3377
Springfield, MO 65808-3377
Toll Free : 888-776-1427
Web: www.vivecomfort.com
Hours of Operation: M-F 9AM - 6PM Eastern


Table of Contents	Page
Table of Contents	1
Thermostat Operation	2-3
Thermostat Quick Reference	4-6
Thermostat Warranty Information	7

Una version en español de este manual se puede descargar en la pagina web de la compañía.



Caution

Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50 °F (10 °C) to prevent possible compressor damage.

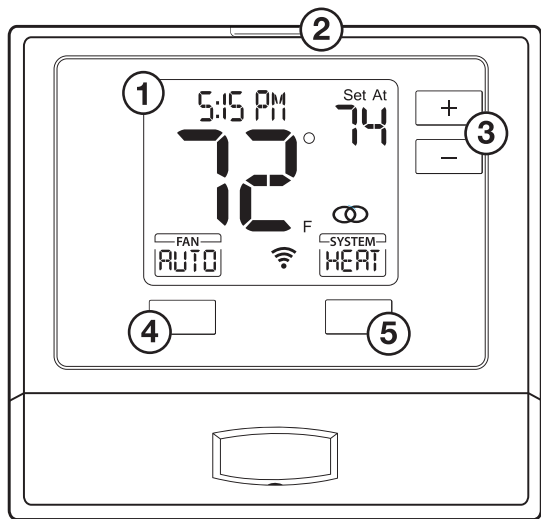

① LCD Display

② Glow in the Dark Light Button

③ Temperature Setpoint Buttons

④ Fan/ User Button

⑤ System/ User Button

① LCD Display

See page 2 for details about display and read out icons.

② Glow in the Dark Light Button

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

③ Temperature Setpoint Buttons

Press the + or - buttons to select the desired room temperature.

④ Fan Button:


Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will run the fan only when the heating or cooling system is on.

Note: Some systems may have fan control disabled.

⑤ System Button:

Select the operation mode of your HVAC system. Selecting **HEAT** will put your system in heating mode. Selecting **COOL** will put your system in air conditioning mode. Selecting **OFF** turns the system off.

Battery Door Information

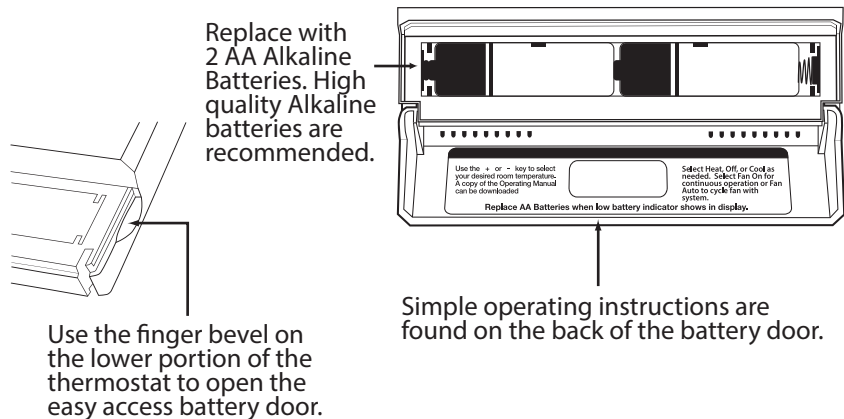

Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the setpoints will change to 55°F (Heating) and 85°F (Cooling). If the user adjusts the setpoint away from either of these, it will hold for 4 hours then return to either 55°F or 85°F. After day 63 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the batteries are changed.



Caution:

When the battery icon **LOW** appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable. Freezing or overheating can occur.


Top Text Field:

Used in programming, also shows Time of Day when a scheduled program is being used.

Setpoint Temperature:

Displays the selected setpoint temperature.

Indicates the current room temperature.

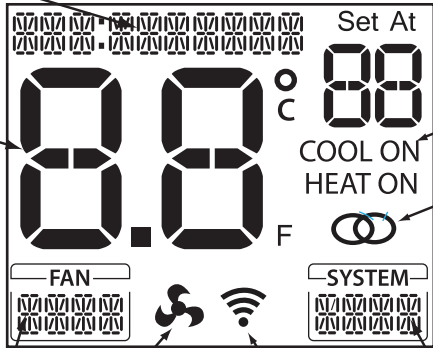

Indicates system mode

WIFI connection indicator

Fan Indicator

WIFI Signal Strength

Bottom Left Text Field:

Used in programming and Hold functions. Will also show current Fan setting.

Bottom Right Text Field:

Used in programming and Hold functions. Will also show current System setting.

Warranty Registration

Your new thermostat has a 5 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. You can register your new thermostat in 2 ways:

Online

Go to the company website, select warranty registration and fill out a short registration form.

Mail

Complete the form below and mail it to the address shown.

Warranty Registration

Name: _____ Thermostat Model: _____

Address: _____ Date Installed: _____

City: _____ Complete form and mail to:

State: _____ **Thermostat Warranty Registration**

Zip: _____ Vive Comfort

P.O. Box 3377

Springfield, MO 65808-3377

**Cut Out For
Warranty Registration**



VIVE
COMFORT
www.vivecomfort.com