



TP-N-701

VIVE Comfort
PO Box 3377
Springfield, MO 65804

Toll-Free: 1-800-776-1635 Web: www.vivecomfort.com
Hours of Operation: M-F 9AM - 6PM Eastern

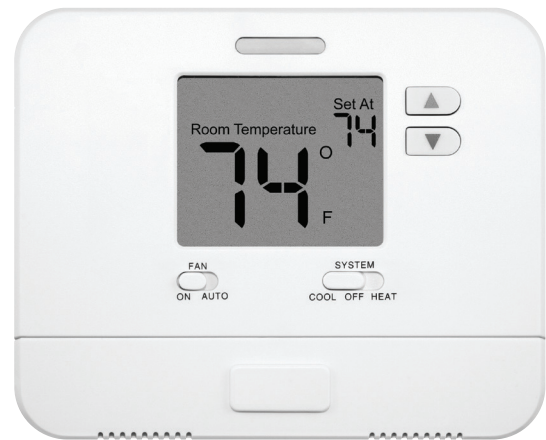


Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Contact Us	4
Warranty Registration	4





Caution:
Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

THERMOSTAT QUICK REFERENCE

Getting to know your thermostat

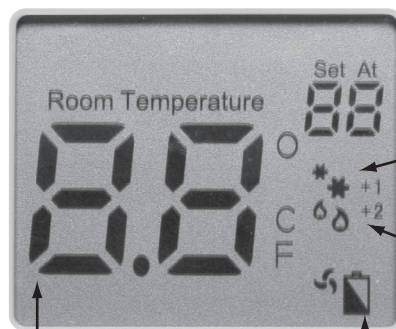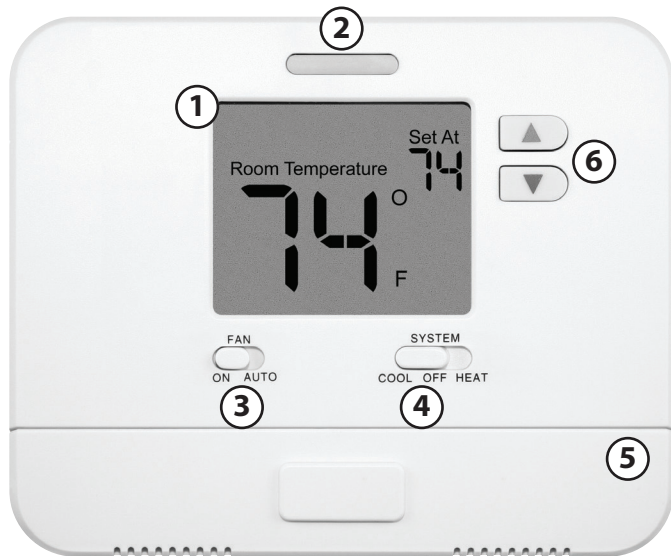

Displays the user selectable setpoint temperature.

*** * * * ***
COOL HEAT FAN

System Operation indicators:
The **COOL**, **HEAT** or **FAN** icon will display when the **COOL**, **HEAT** or **FAN** is on.

NOTE: The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.

Low Battery Indicator:
Replace batteries when indicator is shown.

Indicates the current room temperature.


- ① LCD Display (Right)
- ② Glow in the Dark Light Button
- ③ Fan Switch
- ④ System Switch
- ⑤ Easy Change Battery Door
- ⑥ Temperature Setpoint Buttons



Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the setpoints will change to 55°F (Heating) and 85°F (cooling). If the user adjusts these setpoints away from these it will hold for 4 hours then return to either 55°F or 85°F. After day 42 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the battery is changed.

Battery door information

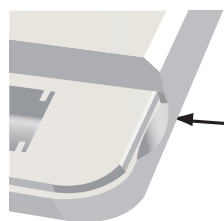

Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.

Insert 2 AA Alkaline batteries (included).

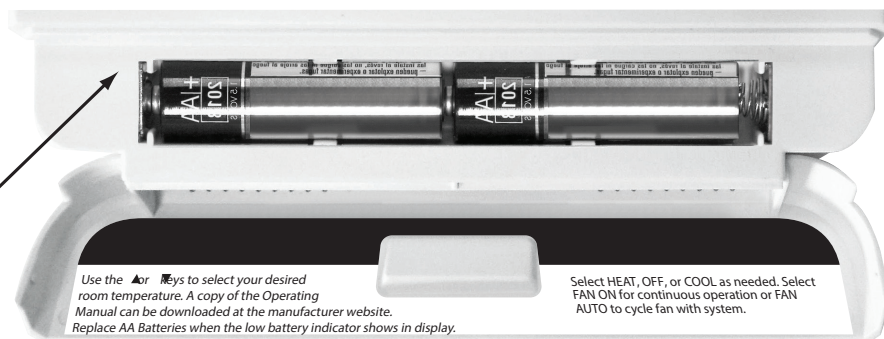


Use the **▲** or **▼** keys to select your desired room temperature. A copy of the Operating Manual can be downloaded at the manufacturer website. Replace AA Batteries when the low battery indicator shows in display.


Select **HEAT**, **OFF**, or **COOL** as needed. Select **FAN ON** for continuous operation or **FAN AUTO** to cycle fan with system.

Simple operating instructions are found on the back of the battery door.

Easy to use controls

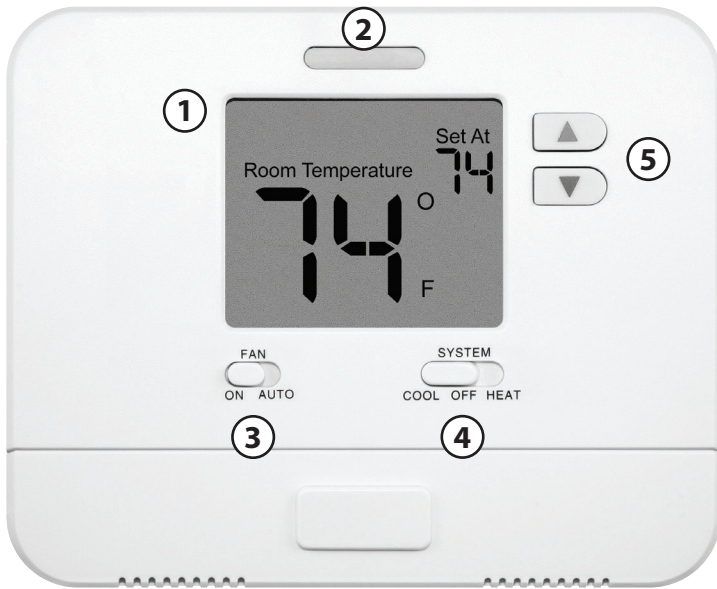

Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

① LCD Display:

See page 2 for details about this display readout.

② Glow in the Dark Light Button:

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

③ Fan Switch:

Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.

④ System Switch:

Select the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off.

⑤ Temperature Setpoint Buttons:

Press the ▲ or ▼ buttons to select the desired room temperature.

Warranty Registration:

Your new thermostat has 5 year limited warranty. You must register your warranty within 60 days of installation. You can register you new thermostat in 2 ways.

- ① Go to our website and fill out a short registration form online.
- or-
- ② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Address: _____

City: _____

State: _____

Zip: _____

Thermostat Model: _____

Date Installed: _____

Complete form and mail to:

Thermostat Warranty Registration

Vive Comfort

PO Box 3377

Springfield, MO 65804