

VIVE<sup>™</sup>  
COMFORT


TP-Z-RISW

VIVE Comfort  
P.O. Box 3377  
Springfield, MO 65804

Toll-Free: 1-800-776-1635    Web: [www.vivecomfort.com](http://www.vivecomfort.com)  
Hours of Operation: M-F 9AM - 6PM Eastern

This manual covers the following models:  
• **TP-Z-RISW** (For use with TP-Z-955W zoning thermostat)

**Congratulations on purchasing our Wireless Zoning System.**  
This zoning thermostat was designed to the highest reliability and ease of use standards. Thank you for choosing our quality products.



**Caution:**  
**Equipment damage hazard**  
Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Table of Contents	Page
Quick Reference .....	2
Mounting Locations .....	3
Mounting Options .....	4
Installing Batteries .....	5
Warranty .....	6

## Getting to know your Zone Thermostat



- ① LCD
- ② Glow in the Dark Light Button \*
- ③ Temperature Setpoint Keys \*\*
- ④ Remote Name
- ⑤ Operation Keys \*\*

### \*NOTE ABOUT THE LIGHT BUTTON:


This button is used to light up the display. DO NOT hold the light button down for longer than 3 seconds or you will enter the technician setup screens. If you inadvertently enter the tech setup press and release the light button a second time to exit the tech screens.

**\*\*NOTE ABOUT SETPOINT & OPERATION KEYS:** These keys will only be shown if they have been turned on in Technician Setup menu.



### Mercury Notice:

All of our products are mercury free. However, if the product you are replacing contains mercury, dispose of it properly. Your local waste management authority can give you instructions on recycling and proper disposal.

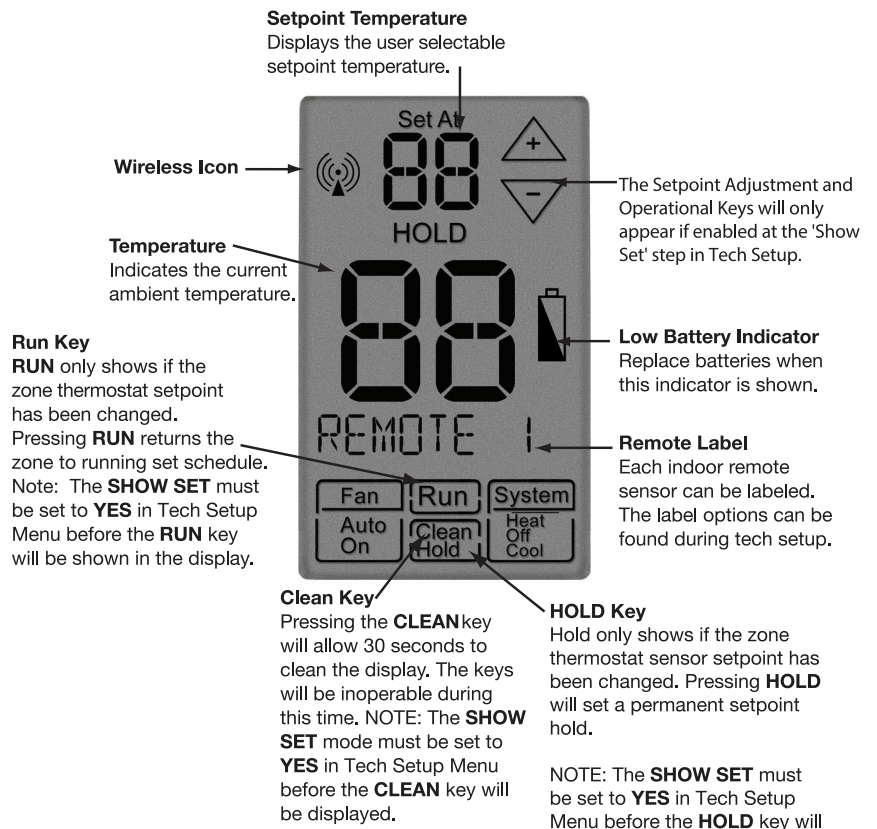


## Wireless Range

Range between the Zone Thermostat and the Master Thermostat is approximately 100 feet with no obstructions and approximately 50 feet in standard residential metal, brick, and concrete construction.

### Zone Thermostat

The Zone Thermostat should be mounted or placed approximately 4 to 5 feet above the floor. Select an area with average temperature and good air circulation.

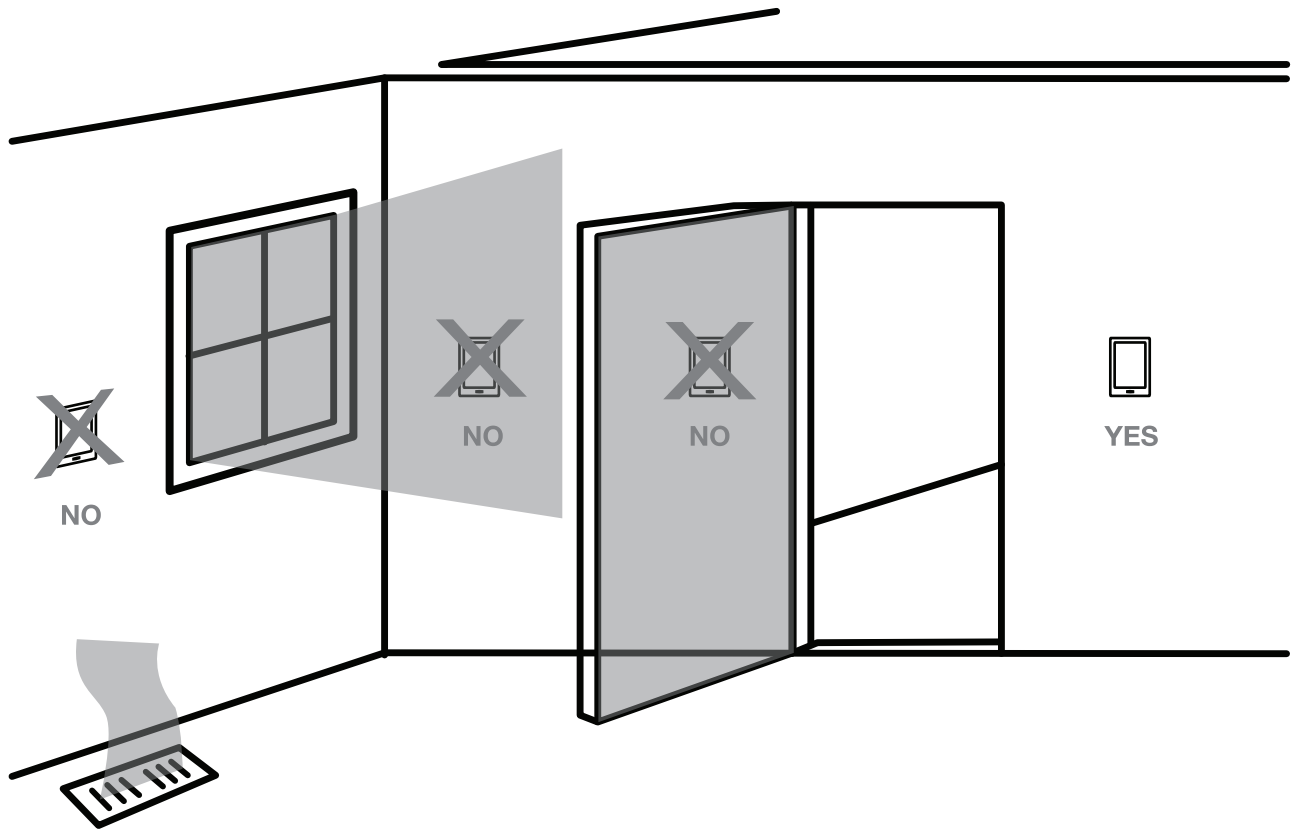

#### Do not mount or place Zone Thermostats in following locations:

- Close to hot or cold air ducts
- That are in direct sunlight
- With an outside wall behind the thermostat
- In areas that do not require conditioning
- Where there are dead spots or drafts (in corners or behind doors)
- Where appliances could radiate heat
- Do not set it next to or on hot appliances
- Do not put it in your pocket or hold in your hands for a long period of time.  
Body heat will distort the temperature reading.


### Wireless Range

Range between the Zone Thermostat and the Master Thermostat is approximately 100 feet with no obstructions and approximately 50 feet in standard residential metal, brick, and concrete construction.


## Wall Mount - Permanent

\*\* It is best for the remote to stay in the zone it is sensing; permanent wall mounting is recommended.

- 1 Remove the zone thermostat from the subbase.

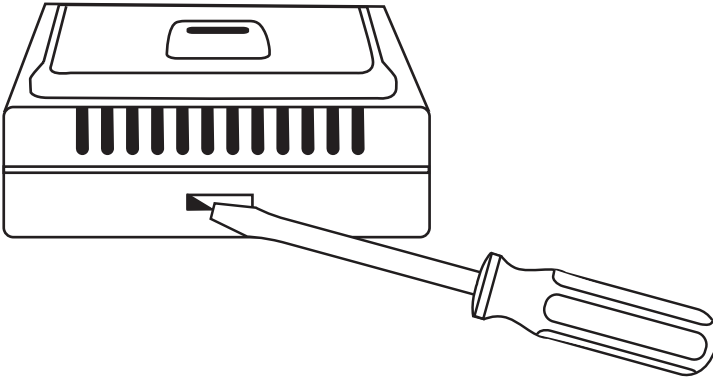


- 2 Mount subbase to the wall

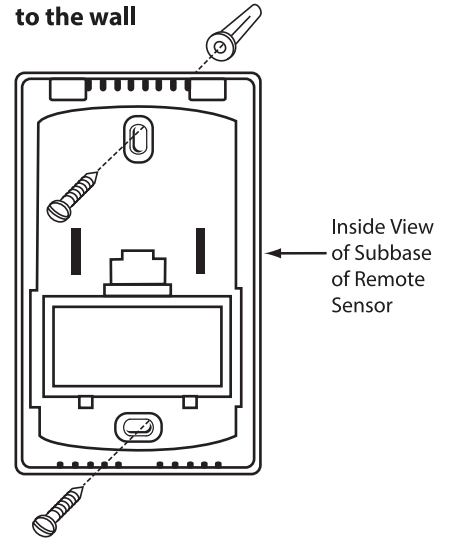


## Wall Mount - Removeable

- 1 Mount T-bracket on the Wall.

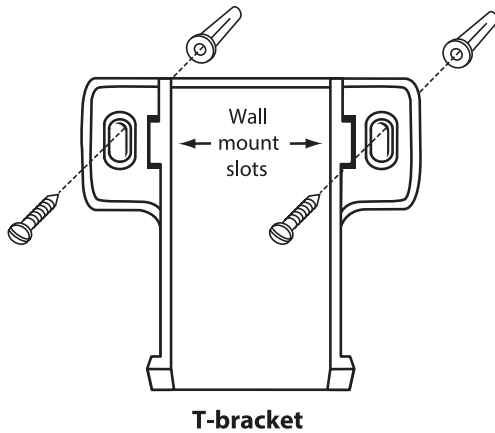


- 2 Slide the Remote Sensor over the mounted T-bracket.

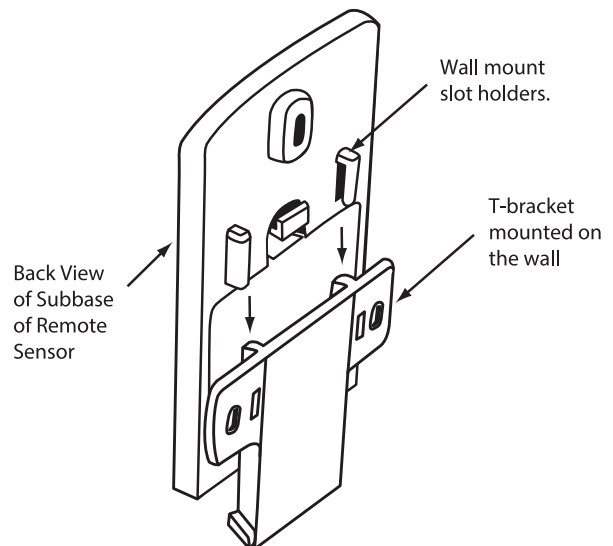


## Desk or Counter Option

- 1 Slide the T-bracket up into the slot holders.

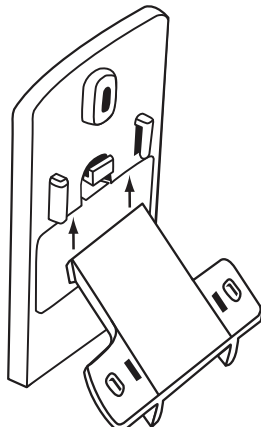

- 2 T-bracket will stop on the top of the slot holders.

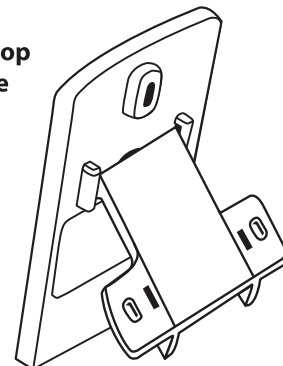

### Installing Batteries for Temporary Wall Mount or Table Placement

- 1 Use the finger tab on the back of the remote to remove the battery door.




- 2 Once you have removed the door from the back of the remote, insert 2 AA Alkaline batteries and replace the battery door.




### Inserting Batteries for Permanent Wall Mount


- 1 Remove the thermostat from the subbase. It is held on the subbase by a plastic tab on the bottom. Push in with a small flat head screwdriver to remove it from the subbase.

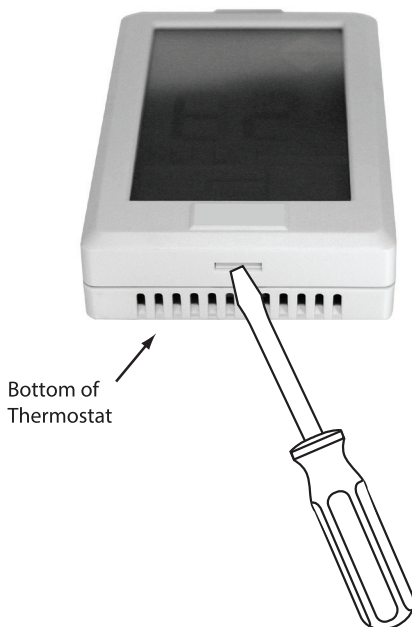

- 2 Once you have removed it from the subbase, insert 2 AA Alkaline batteries.

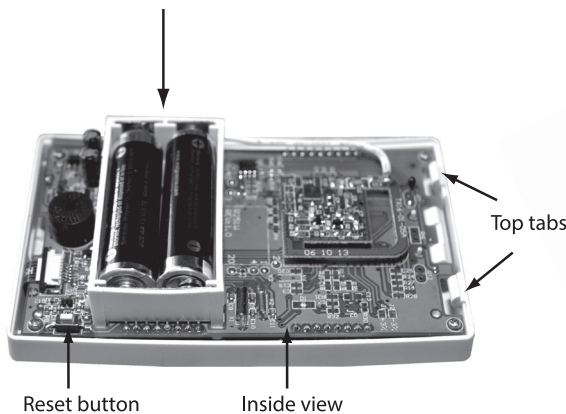

- 3 Attach the thermostat to the subbase by aligning the two top tabs and then close as shown.

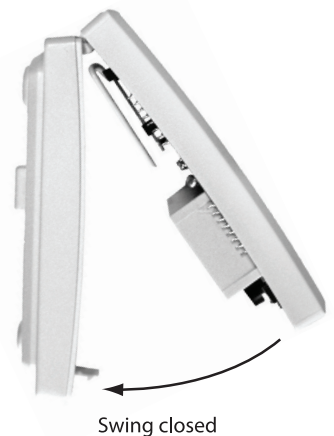

## Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

① Go to our company website, select warranty registration and fill out a short registration form.

- or -

② Complete the form below and mail it to the address shown.



## Warranty Registration:

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_

Zip: \_\_\_\_\_

Thermostat Model: \_\_\_\_\_

Date Installed: \_\_\_\_\_

Complete form and mail to:

**Thermostat Warranty Registration**

**VIVE Comfort**

P.O. Box 3377

Springfield, MO 65804