Installation



Vive Comfort

PO Box 3377 Springfield, MO 65804 Toll Free : 888-776-1427 Web: www.vivecomfort.com Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Specifications	2
Installation	3-4


Need Help?

For assistance with this product please visit http://www.pro1iaq. com or call Pro1 Customer Care toll-free at 888-Pro1iaq (776-1427) during normal business hours (Mon-Fri 9 AM - 6 PM Eastern)

T150 Thermostat Guard

TP-G150

Our thermostat guard is fit to cover and protect any thermostat in our line. We have also sized it to fit most of the modern controls of todays industry. It was designed with ease, simplicity and versatility in mind. It can be installed without removing an existing thermostat from the wall, and can be mounted horizontally or vertically.

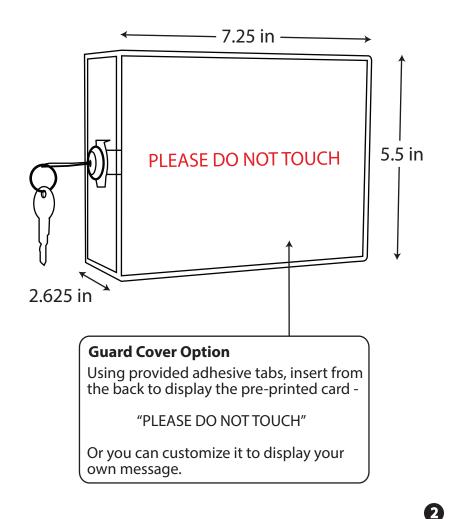

® U.S. Registered Trademark. Patents pending Copyright © 2018 All Rights Reserved.

Rev. 1809

Installation


Installation Steps

1. Place the base of the guard around the thermostat centered and level.

2. Mark the wall at the 4 mounting holes with a pen or pencil.

3. Mount the guard base using the 4 anchors and screws provided, with the locking tab on the side you wish the lock to be on.

4. Place the guard onto it's base and securely lock into place.

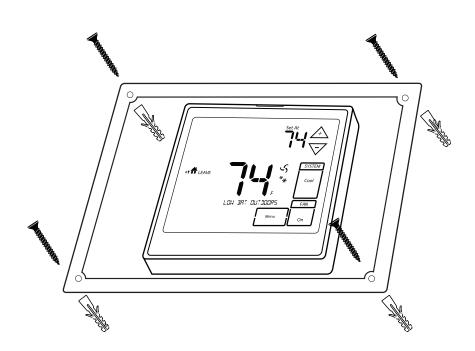

Installation Tip:

When using this or any thermostat guard, the thermostat will experience a decrease in temperature dissipation due to reduced airflow. To compensate for this when using a Pro1 Thermostat, we recommend you adjust the swing setting to its tightest setting (.2° F).